

# PREMIUM QUALITY SAFETY LINER

## INSTALLATION INSTRUCTIONS.....

**A** Lay the safety liner inside the frame matching the seams in the corners of the liner to the corners in the frame. Eliminate any creases or folds in the liner over the area where it covers the heater pad.

**B** Unfold the mattress and lay it over the liner with the valve side up, and the valve at the foot of the bed. Take time to center the mattress proportionately on all sides of the bed as this will insure a correct fill. pop up the telescopic valve on the mattress. For easiest filling, you should use a Fill & Drain Kit. The hose adaptor screws into the hose and will fit snugly into the valve without causing any damage to the valve. Wrap a piece of tape around the end of the fitting in the valve to avoid any separation or spillage. Attach the faucet adaptor provided to the nearest indoor faucet and screw the hose into it.

**C** Turn on warm water at a moderate rate and fill the mattress until it just barely reaches the top of the frame boards. With average water pressure it will take approx. 30-45 minutes to fill a King Size bed, so make sure you check it periodically so as not to overfill it.


**D** Test the mattress for comfort. Add or remove a small amount of water until it feels most comfortable to you.

**E** Turn off the faucet and let the remaining water in the hose drain into the mattress. Then carefully remove the hose from the mattress leaving the valve popped up. Have no fear, the water won't spill out. Pour the bottle of waterbed conditioner into the mattress. This will inhibit algae growth. Repeat it every six months.

**F** Remove the air from your mattress by moving the air towards the filler valve with a broom handle rubbed smooth against the mattress. The removal of air will prevent any sloshing sounds within the mattress. Air will need to be removed whenever sloshing becomes evident.

**G** Place the cap and plug insert on the valve and secure. Push the valve flush with the rest of the mattress.

**H** Wipe up any and all spillage now as it will not evaporate. Some people are fooled by believing spillage to be a leak.

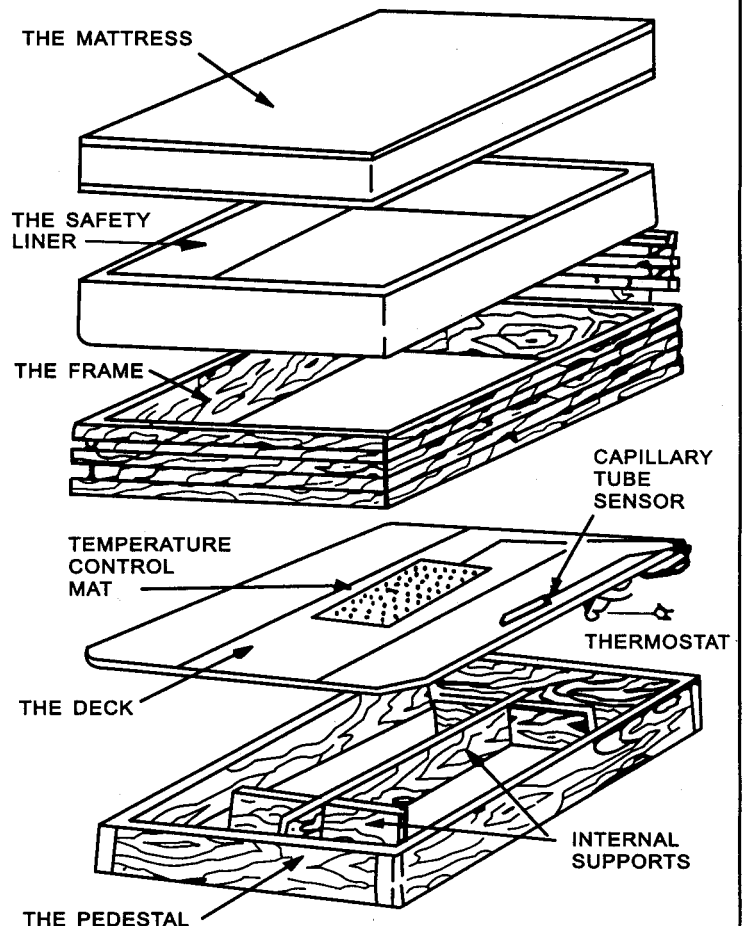

**CAUTION**  
DO NOT FILL MATTRESS  
SO THAT THE WATER LEVEL  
REMAINS ABOVE THE TOP OF  
THE SAFETY LINER